


TUBELESS FITTING WITH SEALANT

ESSENTIALS

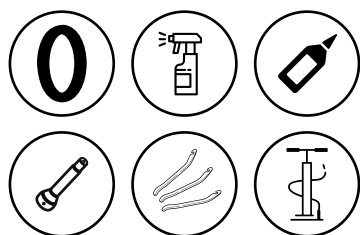

- RED POISON EVO
- SOAP AND WATER
- TUBELESS SEALANT
- TUBELESS VALVE
- LEVERS
- PUMP

VIDEOTUTORIAL

SCAN THE QR CODE AND WATCH
THE FULL TUTORIAL:



TUBELESS FITTING WITH SEALANT

1. FIT THE TUBELESS VALVE INTO THE SEAT ON THE RIM.
2. FIT THE FIRST SIDE OF THE TYRE ONTO THE RIM.
3. HOLD RED POISON EVO DOWN WITH BOTH FEET AND PULL THE FREE TOP PART TOWARDS YOU WITH YOUR HANDS
4. REPEAT THE OPERATION IN SEVERAL PLACES TO MAKE IT EASIER TO INSTALL THE PRODUCT.
5. FIT THE RED POISON EVO ONTO THE RIM.
6. WET THE RED POISON EVO AND THE TYRE WITH SOAP AND WATER.
7. FIT THE TYRE INTO THE RIM CHANNEL EXCEPT FOR A SECTION OF APPROX. 15 CM.
8. USE THE FREE SECTION TO INSERT THE LATEX INTO THE TYRE.
9. FIT THE REMAINING SECTION OF THE TYRE INTO THE RIM.
10. INFLATE TO SEAT THE WHOLE TYRE.
11. DEFLATE UNTIL THE REQUIRED PRESSURE IS REACHED.

PRODUCT COMPATIBILITY

27,5" WHEEL	
TYRE WIDTH	RIM WIDTH (INTERNAL)
	from 27mm to 35 mm
from 2.35" to 2.50"	RED POISON EVO 27,5"

29" WHEEL	
TYRE WIDTH	RIM WIDTH (INTERNAL)
	from 27mm to 35 mm
from 2.35" to 2.50"	RED POISON EVO 29"

700C WHEEL	
LARGHEZZA PNEUMATICO	RIM WIDTH (INTERNAL)
	from 18mm to 25mm
from 32mm to 50mm	RED POISON EVO GRAVEL

Tables based on tests carried out using the main tyre brands on the market. However, the declared size of the tyre section is susceptible to variation, depending on the model and/or manufacturer.